


Tower Location ?? - Exact Location of the Operator is Required. There will be a Track Interface Located in the Tower Next to the Operator Location. All wires from the Start Line Junction Box and the Mid Track and Finish Line Junction Boxes MUST go to the Track Interface Box in the Tower.

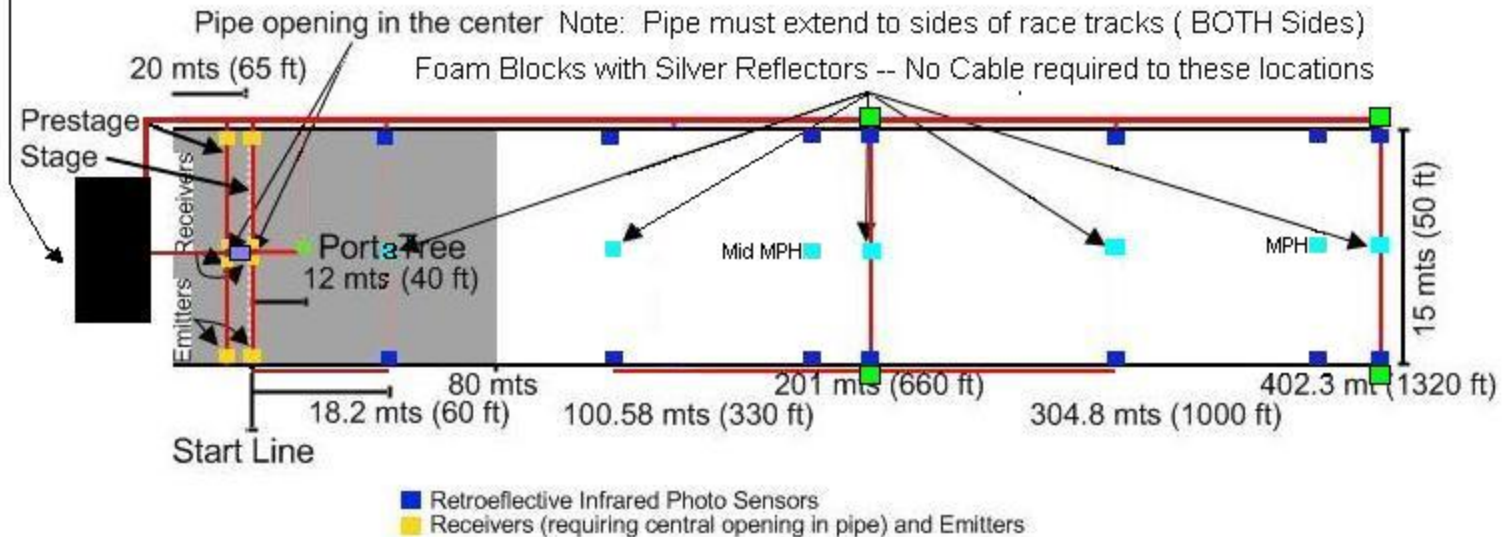

— Location of ALL UnderGround Pipes for the timing system cables

Note: Starting Line has 2 Under Ground Pipes -- One for Power - One for Timing System

Note: There MUST be an underground pipe at the Finish Line from One side to the Other side

Note: You MUST have an underground pipe at the 660 foot location for the Main Mid Track Cable

■ Mid Track and Finish line Junction Boxes ■ Start Line Junction box - Center of Start Line

NOTE: The Start Line cable can be run directly from the Tower to the start line in the Center of the Track. The Finish Line cables can go out the side of the tower and on one side of the track while crossing over to the junction boxes at Mid Track and the Finish line through the underground pipes.

Note: MPH Locations are exactly 66 Feet Back from the 660 Foot and 1320 Foot Locations